
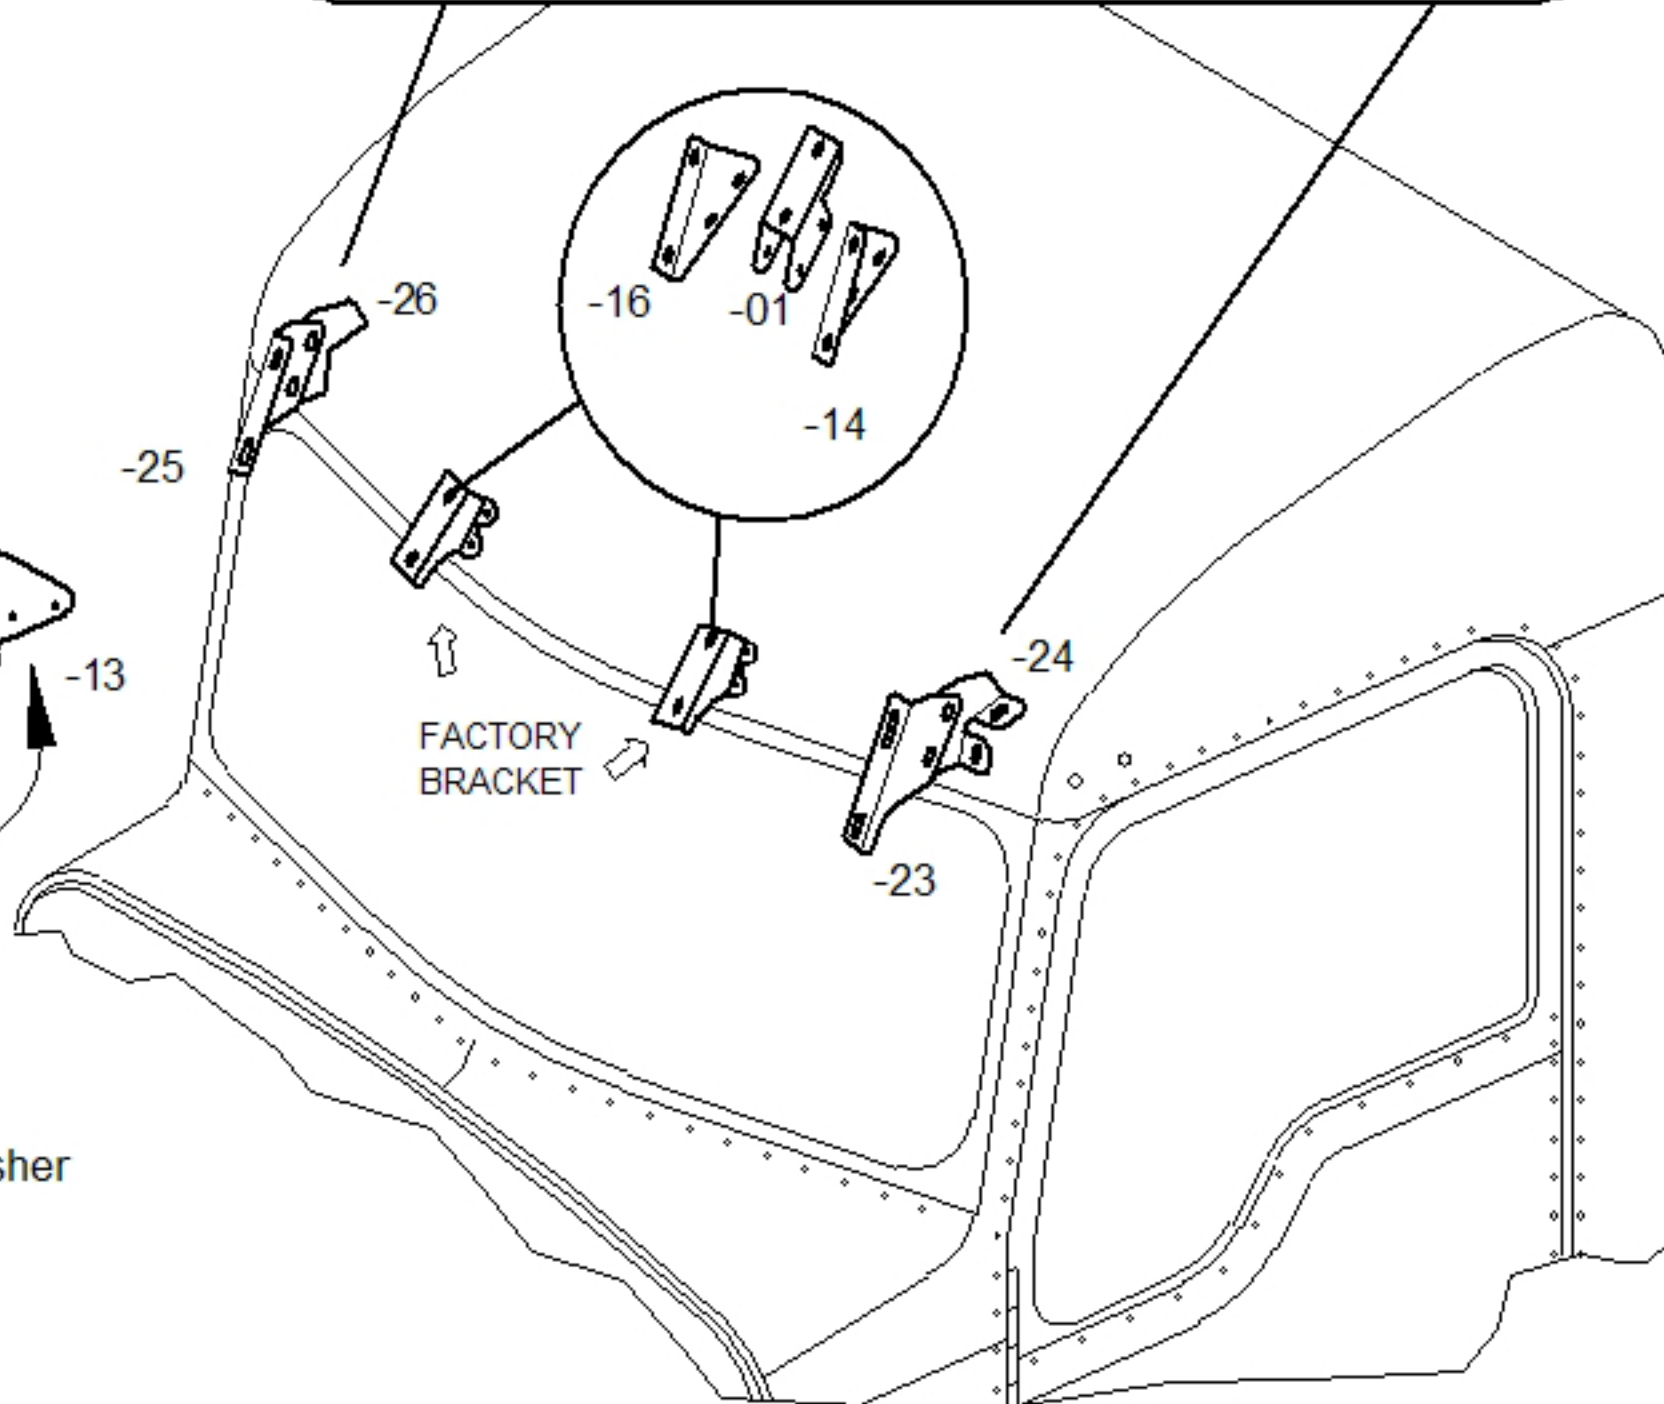
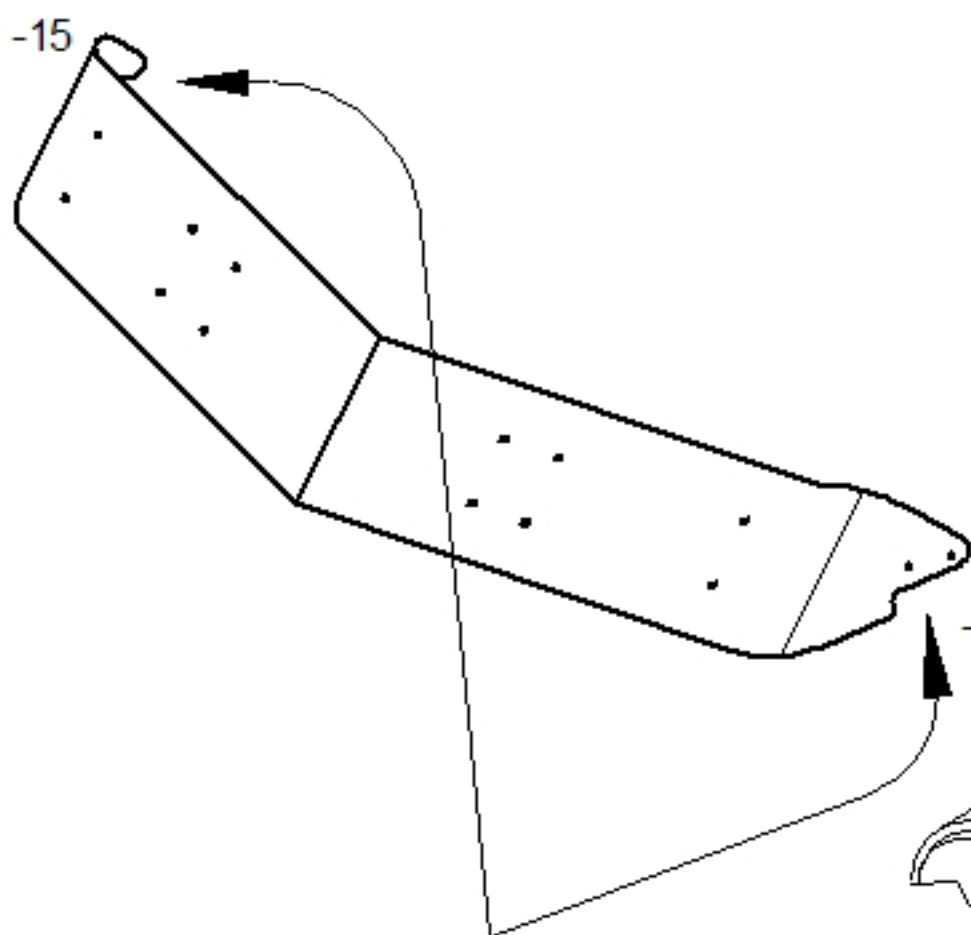
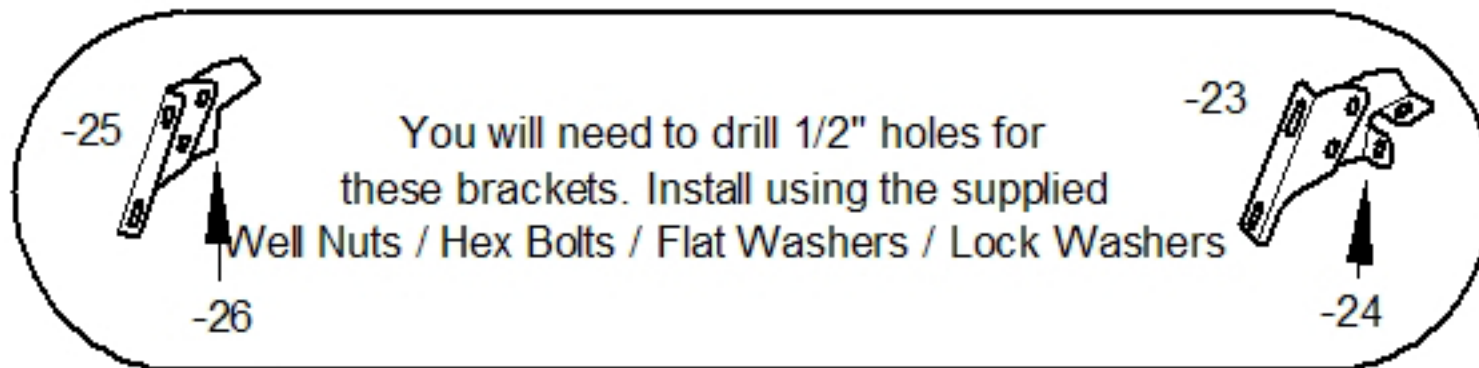


SIDE VIEW OF STABILIZER
(RESTS ON WINDSHIELD)


13" DROP VISOR FOR 1 & 2 PIECE CURVED WINDSHIELD KENWORTH 2007 & NEWER.
REPLACES FACTORY 1 PIECE STAINLESS STEEL VISOR WITH 2 BRACKETS.
DOES NOT FIT TRUCKS WITH 3 FACTORY BRACKETS (SEE DIAGRAM ON REVERSE SIDE)

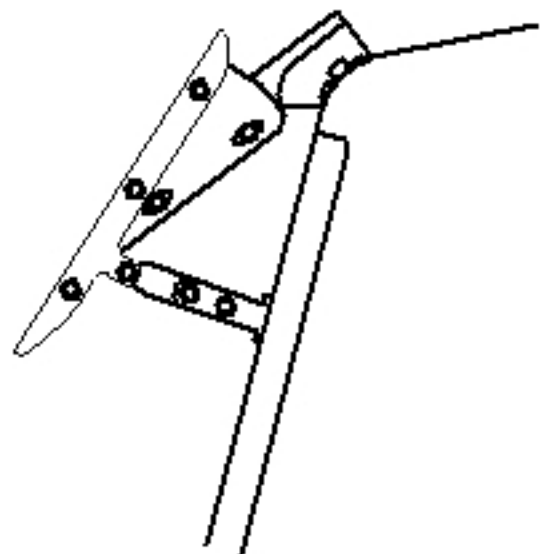

One additional 1/2" holes will need
to be drilled for each side. Use supplied
Well Nut / Hex Bolt / Flat Washer / Lock Washer

YOUR TRUCK SHOULD
LOOK LIKE THIS

FITS 1 AND 2 PC WINDSHIELD WITH
FACTORY INSTALLED 1 PIECE VISOR WITH 2 BRACKETS

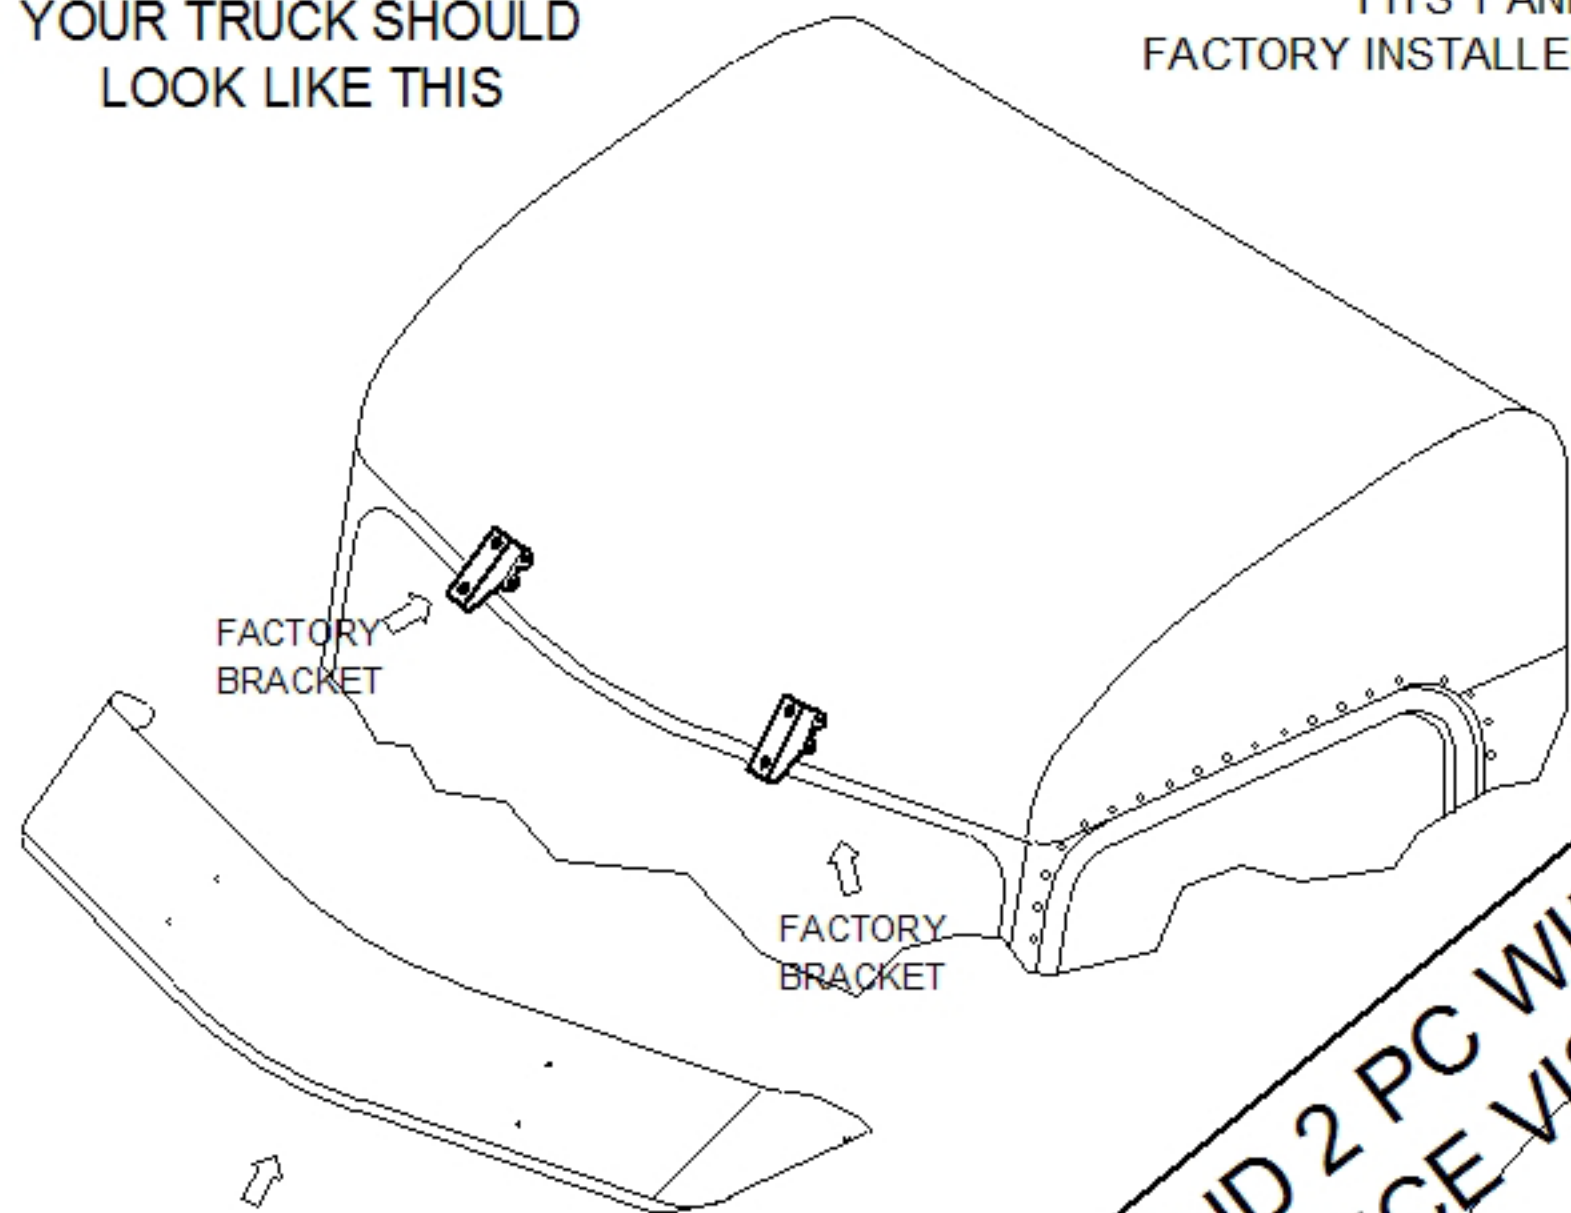


FACTORY
BRACKET

FACTORY
BRACKET

1 PIECE FACTORY
STAINLESS STEEL VISOR

DOES NOT FIT 1 AND 2 PC WINDSHIELD WITH
FACTORY INSTALLED 3 PIECE VISOR WITH 3 BRACKETS

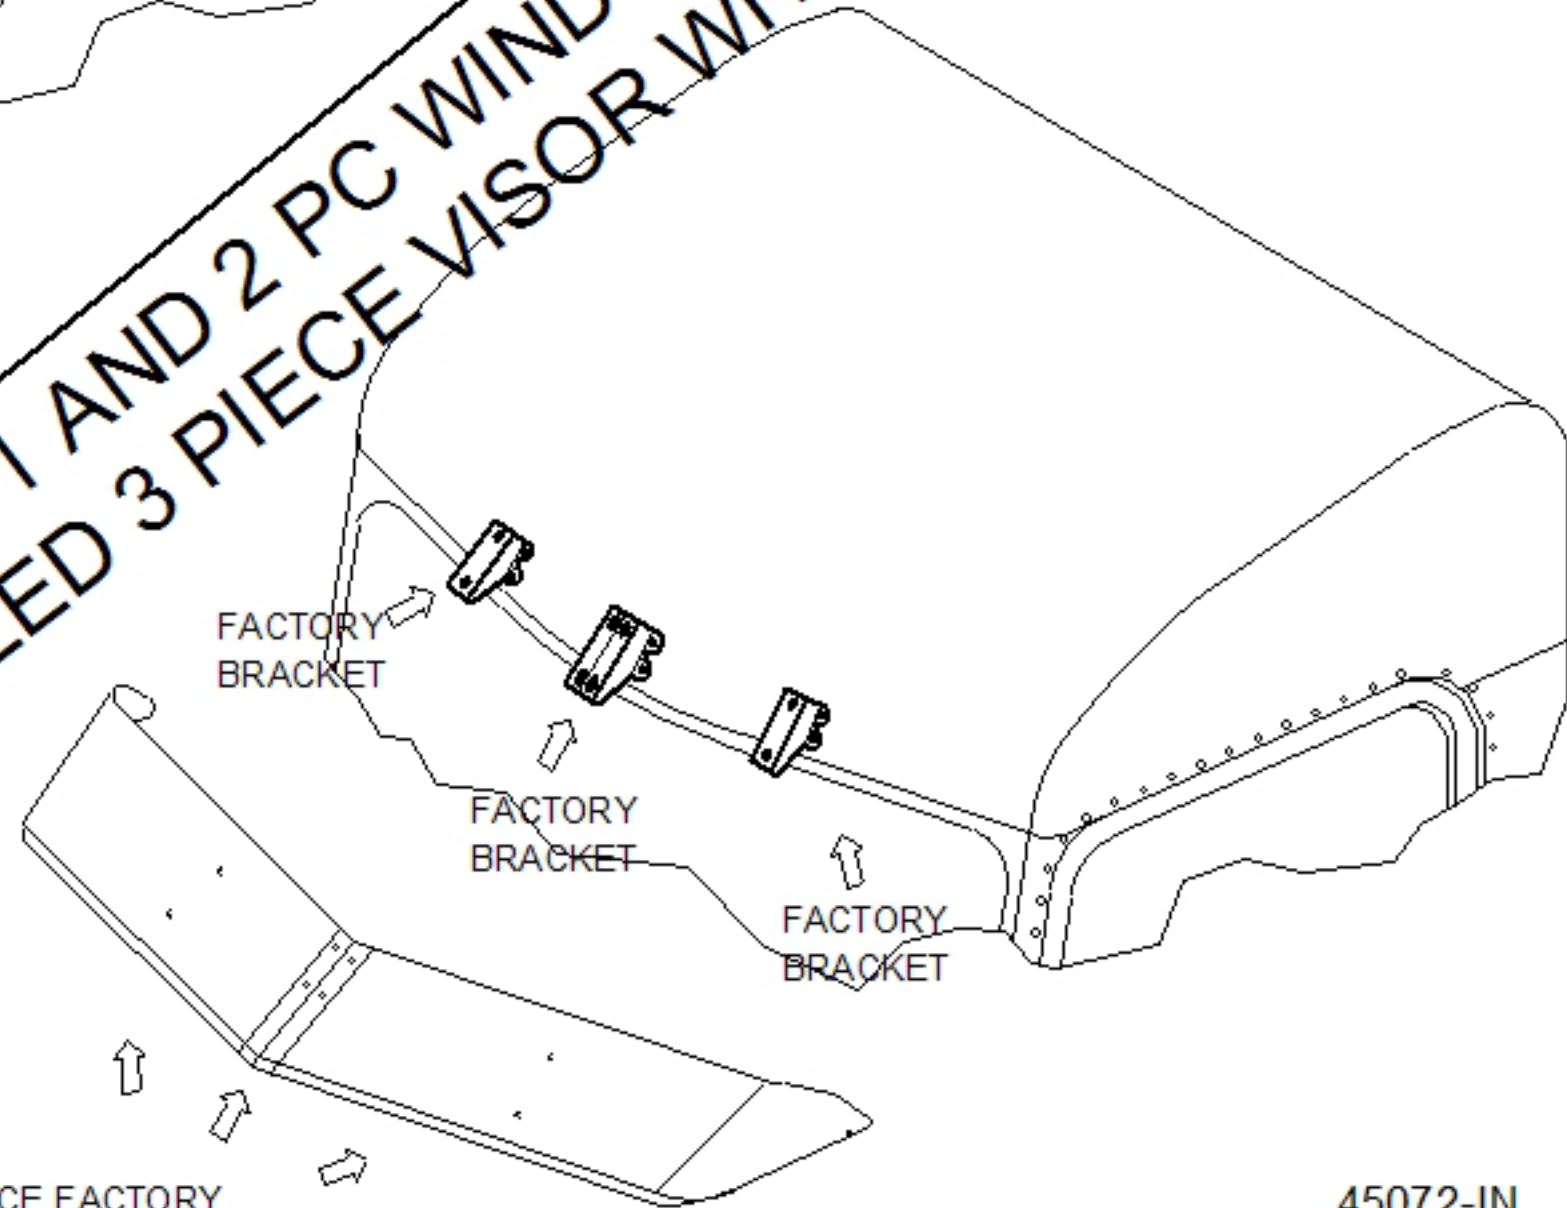

FACTORY
BRACKET

FACTORY
BRACKET

FACTORY
BRACKET

3 PIECE FACTORY
STAINLESS STEEL VISOR

45072-IN