

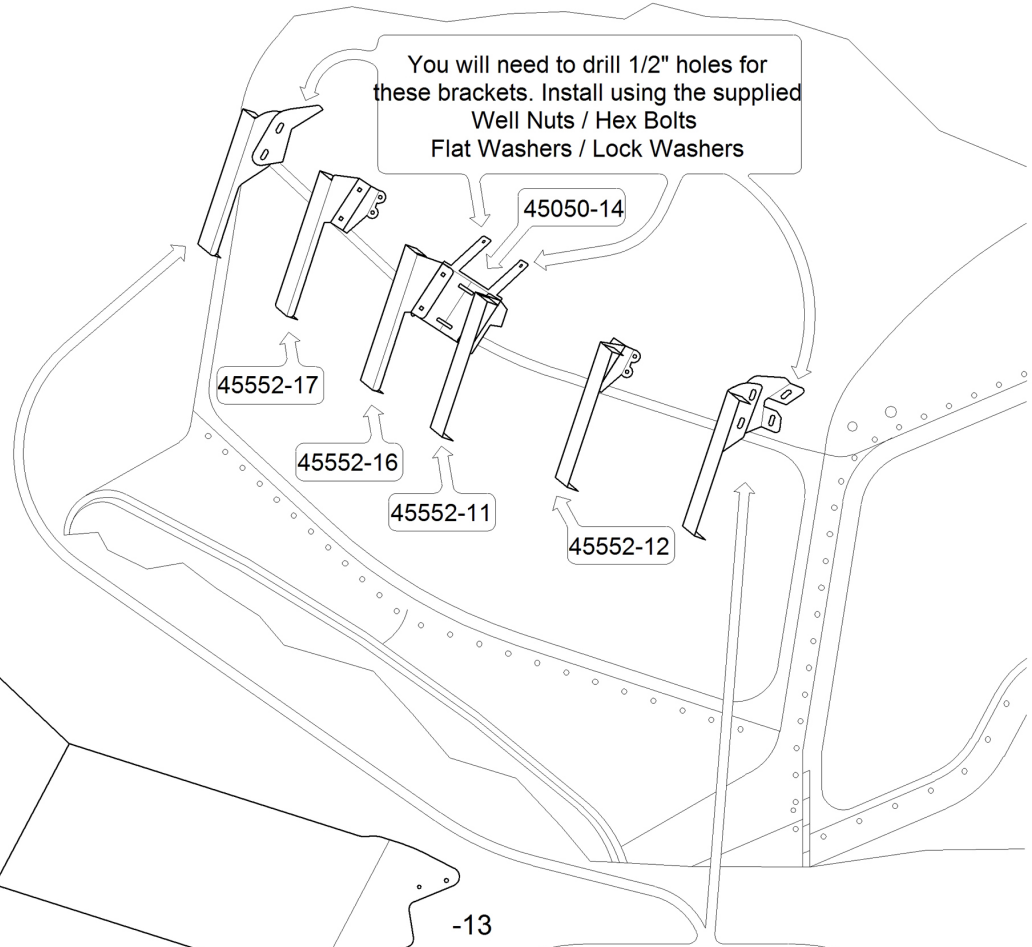
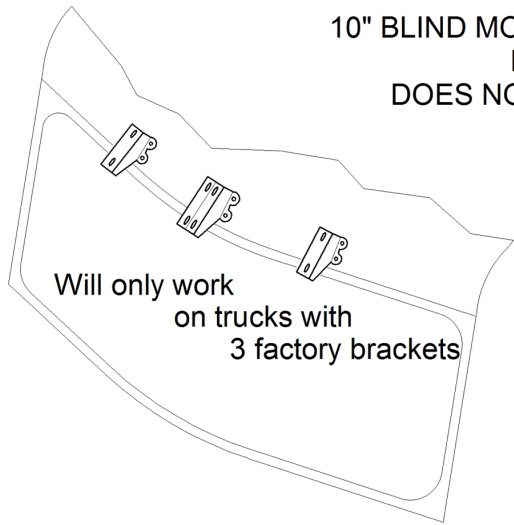


10" BLIND MOUNT DROP VISOR FOR 1 & 2 PIECE CURVED WINDSHIELD KENWORTH 2006 & EARLIER.  
 REPLACES FACTORY 2 PIECE STAINLESS STEEL VISOR WITH 3 BRACKETS.  
 DOES NOT FIT TRUCKS WITH FACTORY FIBERGLASS VISOR OR 2 BRACKET FACTORY VISOR

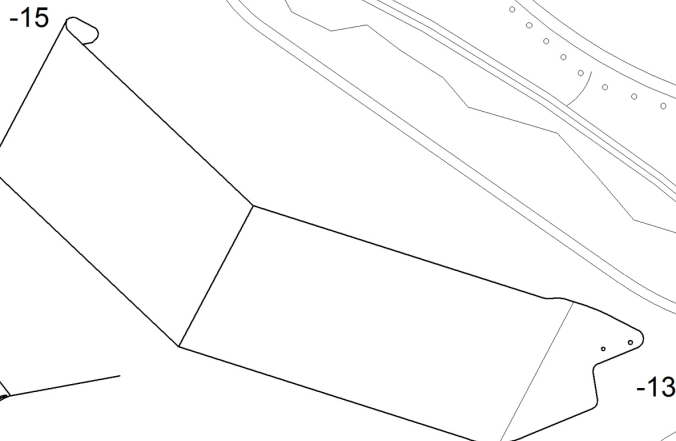


Ends of brackets have nutserts for fastening visor to brackets

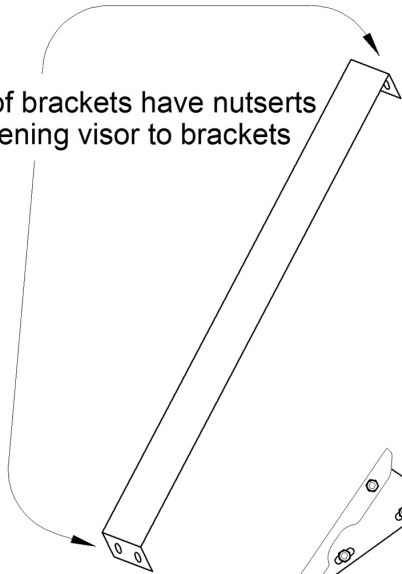

SIDE VIEW OF STABILIZER (RESTS ON WINDSHIELD)

45552-IN

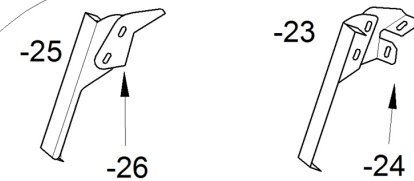

These are additional brackets. You will need to drill 1/2" holes for these brackets. Install using the supplied Well Nuts / Hex Bolts / Flat Washers / Lock Washers