

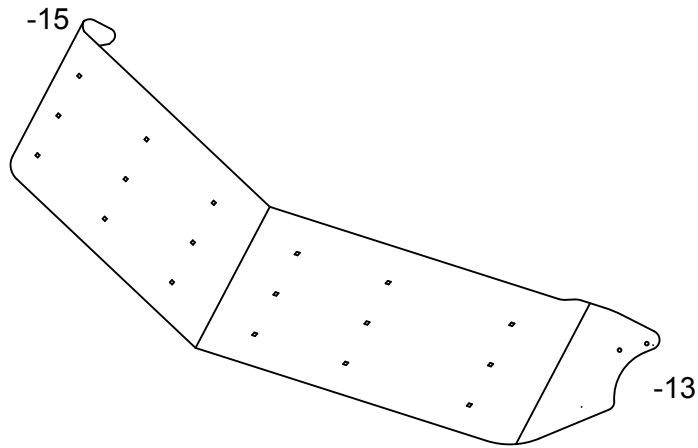


10" DROP VISOR FOR 1 & 2 PIECE CURVED WINDSHIELD KENWORTH WITH CAST STYLE MIRRORS. REPLACES FACTORY FIBERGLASS VISOR OR TRUCK WITH NO FACTORY VISOR WILL NOT WORK WITH STAINLESS TUBULAR STYLE MIRROR BRACKETS

SIDE VIEW OF STABILIZER
(RESTS ON WINDSHIELD)

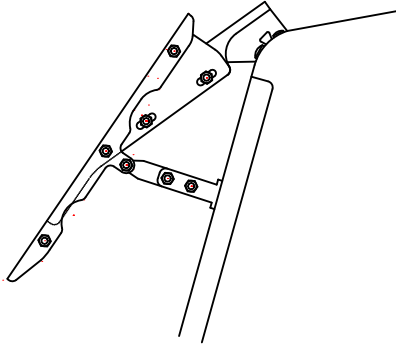

You will need to drill 1/2" holes for these brackets. Install using the supplied Well Nuts / Hex Bolts Flat Washers / Lock Washers

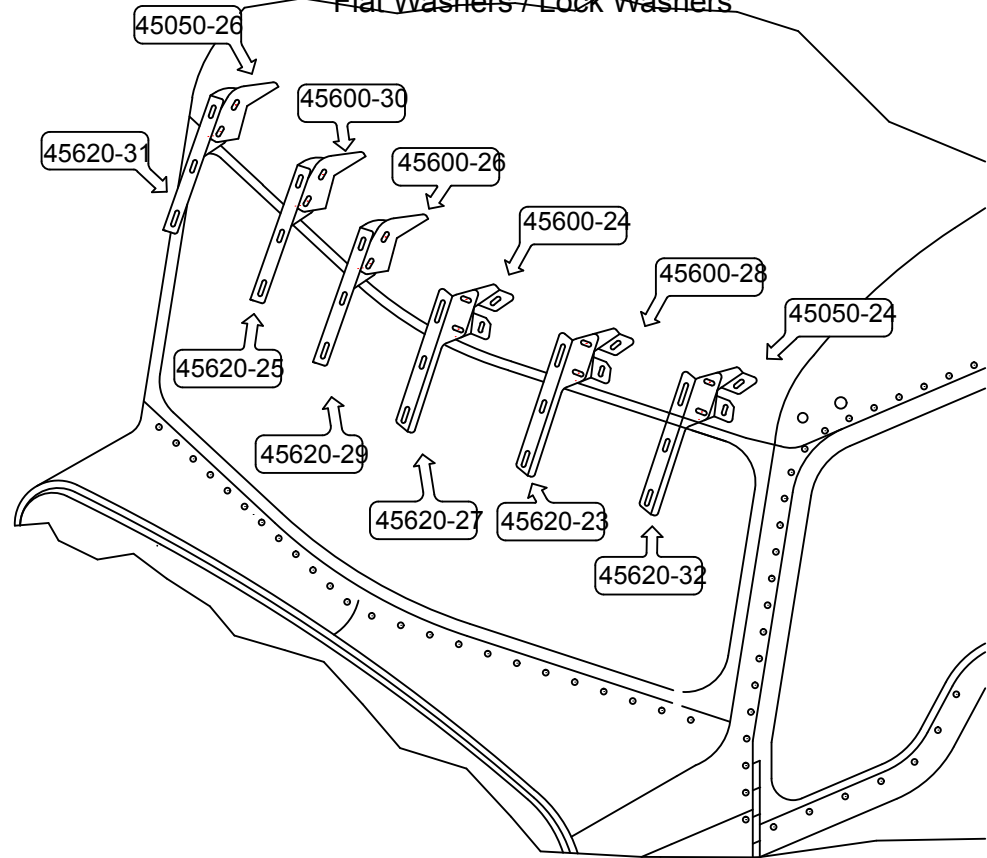

45620-IN